


**MULTI DWELLING**

**Non Wet Areas**

*Areas other than Kitchens, Bathrooms, Toilets, and Laundries*

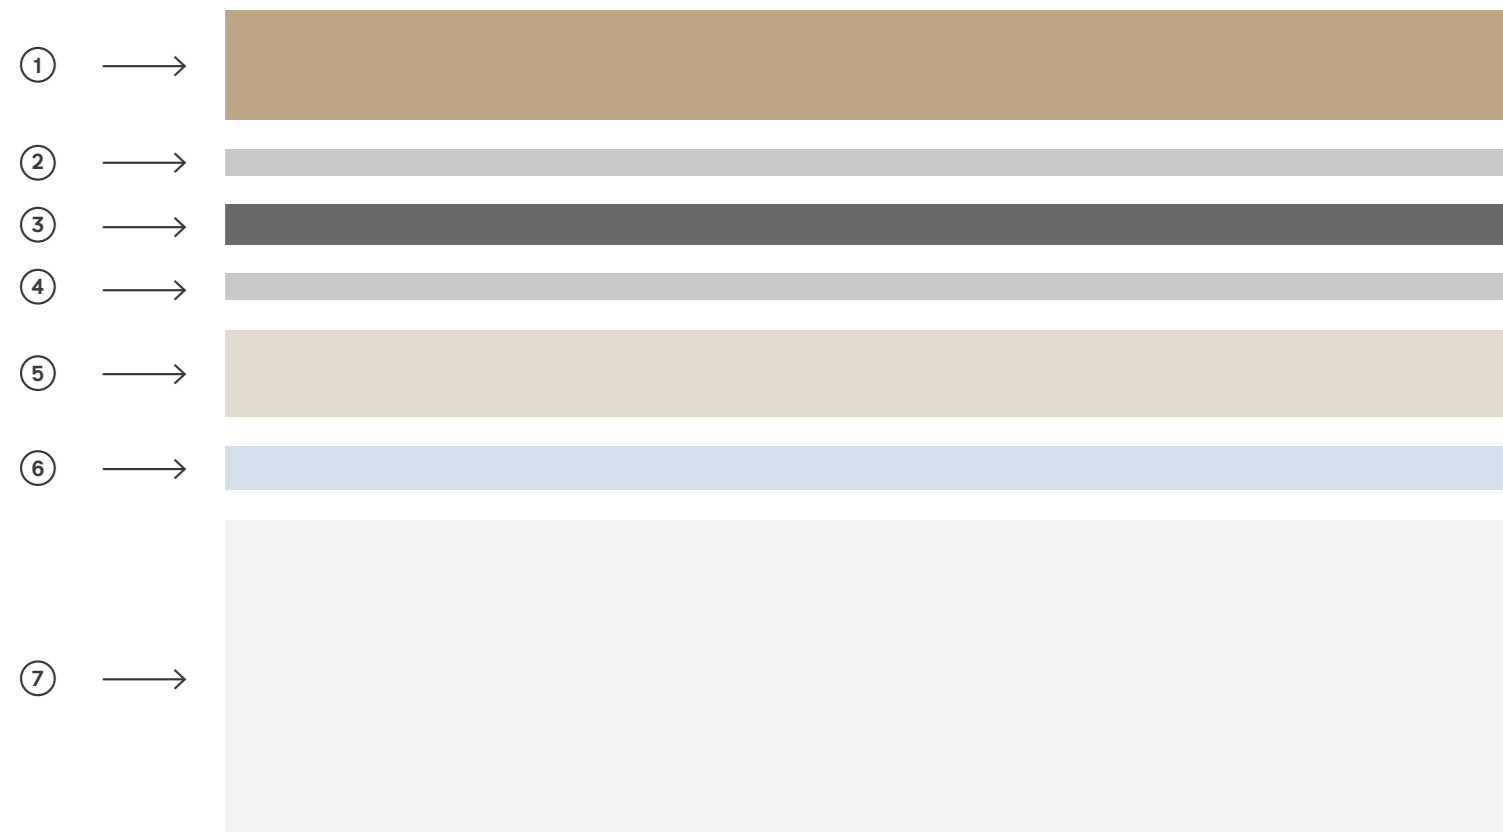

①	<b>Forté Engineered Timber</b>	
②	<b>Timber Adhesive</b>	Option 1: Selleys Liquid Nails Timberflex Option 2: Mapei Ultrabond Eco S955 1K Option 3: Ardex 480 MS
③	<b>Acoustic Underlay</b>	Forté Acoustic-Mat Underlay (or equivalent) as per <a href="#">Forté Installation Guide</a> (refer to 4.7).
④	<b>Timber Adhesive</b>	Option 1: Selleys Liquid Nails Timberflex Option 2: Mapei Ultrabond Eco S955 1K Option 3: Ardex 480 MS
⑤	<b>Floor Surface Preparation (If Required)</b>	As per as per <a href="#">Forté Installation Guide</a> (Refer to 4.2.3.)
⑥	<b>Epoxy Moisture Barrier (If Required)</b>	As per as per <a href="#">Forté Installation Guide</a> (Refer to 4.2.2.)
⑦	<b>Substrate</b>	Slab-on-grade or suspended concrete or sheet timber.