

moda/

CHEVRON

SPECIFICATION SHEET

Moda Collection Engineered T&G Chevron plank by Forté. 16mm thick, 127mm wide, 548mm length. Glue down installation method onto substrate. Pre-finished UV-cured polyurethane.

PRODUCT DETAILS

Collection	Moda
Product Type	Engineered Chevron Plank 60°
Availability	Stocked
Total Thickness	16mm
Width	127mm
Length	548mm
Wear Layer	4mm Solid European Oak
Core	FSC® Marine Grade Birch Plywood
Construction	12mm Engineered Core + 4 mm solid Oak wear layer
Re-sands	Approximately 2-3 (approx. 1mm removed per re-sand)
Surface Texture	Lightly Brushed
Surface Sheen	Extra Matte
Bevel	0.5mm Micro-bevel 4 sides
Status	Pre-finished (no additional coats required)
Finish	SilkMatte (4 Layers of UV-cured Polyurethane)
Species	FSC® European Oak
Wood Grade	Rustic (refer to page 2 for details)
Filler Colour	Dark
Crafted in	Europe


Moda Collection is also available in 190mm planks, herringbone, stair nosings, and reducers.

WARRANTY

5 Year Commercial For terms and conditions see
25 Year Residential www.forte.co.nz/warranties

SUSTAINABILITY

FSC® Certified
No Added Formaldehyde
We re-plant what we use Visit forte.co.nz/environmental

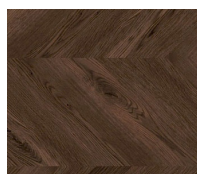

Dolcedo

INSTALLATION

Installation Method	Glue Down (Double Stick for Multi-level)
Suitable Substrates	Plywood, Particle Board, Concrete, existing timber - enquire for others
Joint Profile	Tongue and Groove (4 sides)
Suitable Applications	Flooring, Walls, Ceilings
Suitable Uses	Residential homes, hospitality, retail stores, restaurants, apartments
Underfloor Heating	• Hydronic Systems • Electric Systems set in screed (ensure screed suitable for UFH) - enquire for others
Wet Area Suitability	Contact the Forté team for information 0508 35 66 77

TECHNICAL SPECIFICATIONS

Reaction to Fire (Floors)	Critical Flux 4.32kw/m ² (average)
Reaction to Fire (Walls and Ceilings)	Group 3 / Class Dfl-s1 (Group 1 for can be achieved with intumescent coating)
Thermal Resistance	0.104m ² K/W
Thermal Conductivity	0.154 W/(m.K)
Resistance to Chemicals	Class 5 (except blue ink)
Formaldehyde Emission	(AS/NZS 2098.11) E0 (0.03mg/L)
Wear Layer Density	650kg/m ³
<u>Slip Ratings</u>	
AS/NZS 4586 Dry Test	0.75 COF - Classification F (Moderate to very low)
AS/NZS 4586 Wet Test	48 SRV - Classification W (Low)

PACK INFORMATION

Pack Size	1.392m ²
Pieces per pack	10 x right + 10 x left
Weight	16kg
Pack Dimensions	168mm H x 275mm W x 681mm L

RECOMMENDED CARE AND MAINTENANCE


Regular Cleaner	Moda Cleaner/Concentrate
Maintenance Cleaner	Moda Protective Wax Cleaner
To Refresh Finish	Moda SilkMatte Refresher
Stain Remover	Moda Heavy Duty Spot Cleaner
For Minor Repairs	Moda Wax Filler & Moda Stain
For Comprehensive Repairs	Moda Professional Repair Kit

Plank Profile

MODA CHEVRON



CHEVRON PLANK

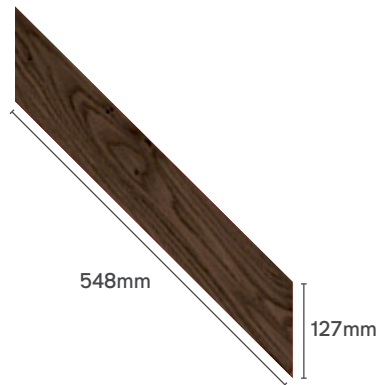

Plank is tongue and groove on all four sides.
Product supplied in right and left planks.

MODA – RUSTIC GRADE

A Moda rustic grade plank consists of large natural features and characteristics throughout the plank. These frequent knots, cracks and features achieve a more rustic, natural look.

Colour Variation	Natural wood variation permitted
Sapwood	Non contrast up to 25% of plank width
Sound Knots	Not Limit (After filling)
Drop Knots / Dead Knots	Limited, up to 45mm
Cracks / Checks	Up to 5mm wide
Bark Pocket	Up to 40mm

Care and Maintenance

RESIDENTIAL AND COMMERCIAL CARE AND MAINTENANCE

Forté's Product Specialists have collated our care and maintenance recommendations to ensure your flooring looks like new for years to come. Residential and Commercial projects require different levels of care and maintenance. Visit www.forte.co.nz/careandmaintenance

Warranty

MODA 25 YEAR RESIDENTIAL WARRANTY

The Moda Collection comes with a full 25 year Residential Warranty. For full warranty terms and conditions, please visit www.forte.co.nz/warranties

MODA 5 YEAR COMMERCIAL WARRANTY

The Moda Collection comes with a full 5 year Commercial Warranty. For full warranty terms and conditions, please visit www.forte.co.nz/warranties

Installation

THE MODA COLLECTION MUST BE INSTALLED BY A TRAINED PROFESSIONAL

Please ensure that you have read and understood the installation guidelines before proceeding to install Moda timber flooring. If you have any questions or concerns, please call the Forté technical team on 0508 35 66 77. Failure to adhere to the Forté Installation Guidelines may void your warranty.

For full installation guidelines, please visit www.forte.co.nz/installation